

# CRUNCH DEFINITION



## DST

**SILK DOME TWEETER SET**

BENUTZERHANDBUCH  
OWNER'S MANUAL



## ANSCHLUSS DER HOCHTÖNER


- Verbinden Sie die Plus-Stecker ("weiß") bzw. die Minus-Stecker ("schwarz") des Hochtöners mit den entsprechenden nicht belegten Kabeln der Kabel-Frequenzweiche, welche aus der mit "OUTPUT" markierten Stelle herausführen.

## ANSCHLUSS DER KABEL-FREQUENZWEICHE

- Verbinden Sie die Plus-Anschlüsse ("+" bzw. die Minus-Anschlüsse ("-")) des Lautsprecher-Ausgangs Ihres Verstärkers mit den entsprechenden Anschlüssen, die aus der mit "INPUT" markierten Stelle herausführen.

Wiederholen Sie beide Schritte für das Kanalpaar auf der anderen Fahrzeugseite.

**WICHTIG: Betreiben Sie den Hochtöner niemals ohne die beiliegende Kabel-Frequenzweiche.**

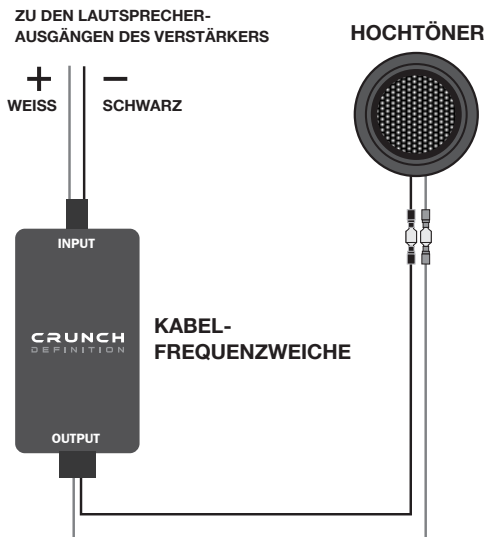

### WICHTIG!

Bitte achten Sie unbedingt auf die korrekte Polarität (+ oder -) aller Anschlüsse und Verbindungen.




## INSTALLATION

The first step of installing a speaker system is a well-thought-out planning. Choose a suitable location for your speaker components carefully. Please observe the following suggestions to ensure proper results and best performance:


1. Choose a location which offers none or just a minimum of obstacles between the components and your ears. Please observe at thereto, the positions of the driver's seat, the headrests and other constructions of the inside of vehicle interior.
2. Mount the left and right speakers in the same array on each side, which means that they are installed at the same height and directly across from each other. Do not install one speaker higher, lower, further forward or further back from the opposite speaker.
3. Always check what's behind the chosen mounting locations to ensure that there is proper clearance for the back of the speaker components and avoid obstructions such as window tracks, wire harnesses, gas tank etc.
4. The best performance will be achieved, when the speakers are securely mounted to a designated speaker opening in a door panel or a rear speaker shelf. There should be no gaps between the speaker basket and the mounting surface.

## TWEETER MOUNTING

### A.) Flush mount with standard housing

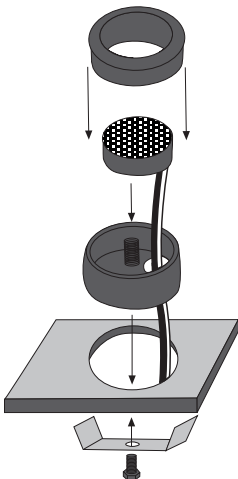

### B.) Angle mount with built-on housing

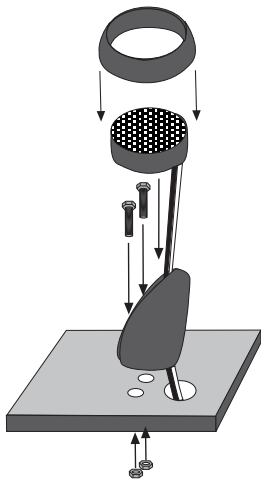

# ENGLISH

## TWEETER INTERCONNECTION


- Connect the positive jacks ("white") and the negative jacks ("black") of the tweeters with the according not occupied cable plugs of the inline crossover, which lead out from the "OUTPUT" marked position.

## INLINE-CROSSOVER INTERCONNECTION

- Connect the positive terminals ("+") and the negative terminals ("-") of the amplifier speaker outputs with the according cables, which lead out from the "INPUT" marked position.

Repeat all three steps for the channel pair on the opposite side of the vehicle.

**IMPORTANT:** Never run the tweeter without the included inline-crossover.

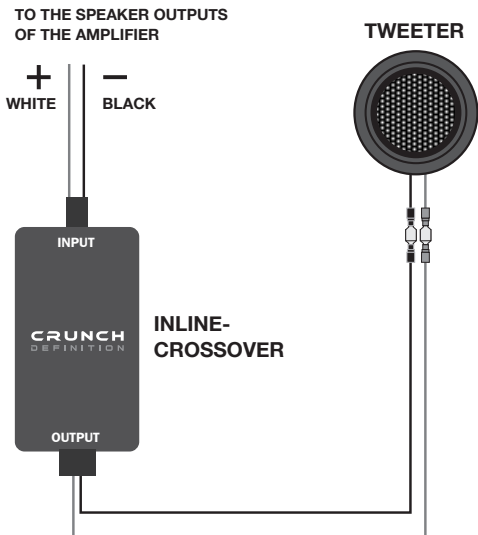

### IMPORTANT

Please observe the correct polarity (+ and -) of all connections.



CAR AUDIO UNLIMITED

# CRUNCH

*turn up your life*



Audio Design GmbH · [www.audiodesign.de](http://www.audiodesign.de)  
Am Breilingsweg 3 · D-76709 Kronau (Germany)  
Tel. +49 (0)7253 - 9465-0 · Fax +49 (0)7253 - 946510